



Maintenance of Gommamica® complete systems

1.1. In general

The sports and playground systems are able to maintain their features over the time, such as flexibility, coating uniformity, predetermined brilliance and adherence. It is, however, necessary that basic procedures are followed to maintain the surface in appropriate conditions:

- protect the sand surface
- moveable equipment (such as, for example, benches) must be carefully removed to prevent damage to the coverings.

1.2 Washing and care

Before washing the surface, remove dirt, leaves and other extraneous material with a soft broom or a vacuum cleaner with broom.

Wash the surface with a solution with a large amount of water, without any soapy solution, using a flat broom if necessary to remove any localized spots.

The cleaning frequency of the entire process depends on the loads and on the use of the surface; do not wash more frequently than once every four months.

Do not use care and cleaning products that use acrylic or wax compounds: these agents may cause surface adhesion problems and, in rare cases, they may damage the surface covering.

In order to maintain the aesthetic appearance, biocides may be used, in any case not more than once in a year (in accordance with the manufacturer's instructions and following the system manufacturer's instructions) to remove mosses and weeds.

If the surface results damaged by paints or graffiti, do not use solvents without the authorization of the manufacturer: these agents could permanently damage the surface.